



Mini Thumper Pro

WEB APP QUICK REFERENCE

NO APP NEEDED

Your phone connects directly to the Mini Thumper Pro -- no internet or app store required, works anywhere on the water.

THE BUTTONS -- SAME AS THE REMOTE

The four main buttons (**A B C D**) and six mode buttons work exactly like the physical remote's combos -- see the Remote Quick Reference card. **One difference:** on the web app, tap a mode button once -- no need to hold two buttons together.

CONNECT YOUR PHONE

1. WiFi network: **Mini Thumper Pro**
2. Password: **thumperpro**
3. Browser address: **192.168.4.1**



Or scan this code once connected to the Mini Thumper Pro WiFi network.

RECORD A CUSTOM PATTERN

- 1 Scroll to **Custom Pattern** and tap **Record a new pattern**.
- 2 Tap the pad in the rhythm you want -- press for a thump, let go for a pause. Up to 32 taps.
- 3 Tap **Stop & Save** and give it a name.
- 4 Find it in your list anytime -- tap **Play** to run it, **Delete** to remove it.

⚠ **EXPECTED WARNINGS** Your phone may say "No Internet Connection" or "Weak Security." Both are normal -- stay connected anyway.

⚠ **QUICK EXIT** While playing any mode or custom pattern from the web app, tap **A** to stop and return to normal control -- same as the remote.

iPhone / Android: Use Safari on iPhone, Chrome on Android. Tap "Join" / "Connect Anyway" when prompted.

💡 **GOOD TO KNOW** Saved patterns live on the Mini Thumper Pro itself, not your phone -- they survive a restart and work from any phone. The app and the physical remote can be used at the same time, even by two different people.

www.minithumper.com