



Mini Thumper Pro

REMOTE QUICK REFERENCE

POWER ON Unit starts in **Manual Mode**. Front dials work like a standard Mini Thumper.

ANY BUTTON Pressing A, B, C, or D switches to **Remote Mode**. Dials are now ignored.

HOLD ONE BUTTON

A **Slower thumps**
(release to hold speed)


B **Faster thumps**
(release to hold speed)

C **Quieter**
(release to hold volume)

D **Louder**
(release to hold volume)



Black remote

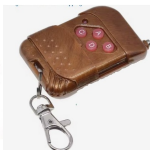

Bronze remote

Either remote may have been included with your Mini Thumper Pro. Buttons match the layout above on both.

PRESS TWO BUTTONS TOGETHER

Buttons	Mode	What It Does	To Exit
A + B	Manual Mode	Returns to front dials (4 quick thumps confirm it)	—
C + D	Mute	Silences thumps — works from Manual or Remote	Press D until volume returns
B + D	Prospecting	Auto-cycles 4 speeds over 20 minutes	Press A
B + C	Scatter & Regroup	Calm cadence, silence, then chaotic bursts — repeats	Press A
A + C	Predator	Cadence speeds up, then slows back down, on repeat	Press A
A + D	Heartbeat	Steady heartbeat-style thump pattern	Press A

⚠ QUICK EXIT In Prospecting, Scatter & Regroup, Predator, or Heartbeat mode, press **A** alone to return to Remote Mode.

🔊 GOOD TO KNOW It can take a couple of thumps for the unit to catch up with a button press — that's normal.

www.minithumper.com